

DISCLAIMER

YOSHIMASA ASSUMES NO LIABILITY REGARDING THE IMPROPER INSTALLATION OR MISAPPLICATION OF ITS PRODUCTS. IT IS THE INSTALLER'S RESPONSIBILITY TO CHECK FOR PROPER INSTALLATION. UNDER NO CIRCUMSTANCES WILL YOSHIMASA BE LIABLE FOR ANY LABOR CHARGED OR TRAVEL TIME INCURRED INSTALLATION OF ITS PRODUCTS. DAMAGE CAUSED BY IMPROPER INSTALLATION IS THE INSTALLER'S RESPONSIBILITY AND YOSHIMASA ASSUMES NO LIABILITY. THE FOLLOWING INSTRUCTIONS ONLY SET AN OUTLINE FOR PRODUCT INSTALLATION.

CLEANING THE AIR FILTER

YOSHIMASA Self-contained (Refrigerated) Sushi Cases come with an AIR FILTER located at the back of the Condensing unit. Depending on air quality of the restaurant, or on the location of the unit installed, some air filters may take a long time to get dirty, while some may take a very short time. However, regardless of time period, we highly recommend clean the AIR FILTER every 2 weeks. Keeping the AIR FILTER clean is very important for the compressor which is considered the heart of Sushi Case.

A dirty AIR FILTER will create congestion in the path of air flow from inlet to outlet, and eventually cause an unrecoverable damage on the compressor. A dirty AIR FILTER is not only harmful for the compressor, but also for the cooling fan. If the cooling fan is contaminated by dirt, it won't run smoothly and start making annoying noises, escalate compressor heat, make the compressor difficult to work and become a source of rising temperature in the food zone of the Sushi Case in the end.

WARNING

Failure to clean AIR FILTER will void the Factory Warranty and the owner will be the one who is to take the consequences. YOSHIMASA won't take any responsibility for it.

Please contact us if you notice any of following symptoms:

- Temperature rises in the food zone
- Annoying noises come from the cooling fan
- Fuse is blown out often

FOLLOW THE INSTRUCTIONS BELOW AND DO IT AT LEAST EVERY 2 WEEKS

1. Hold the louver handle and lift upward.

The louver is located in the back of the condensing unit and right above the power switch box.



2. Tilt the louver outward a bit and pull it down all the way.

Do not force the louver to take it out, but gently shake it side to side a couple times instead and pull it down.



DISCLAIMER

YOSHIMASA ASSUMES NO LIABILITY REGARDING THE IMPROPER INSTALLATION OR MISAPPLICATION OF ITS PRODUCTS. IT IS THE INSTALLER'S RESPONSIBILITY TO CHECK FOR PROPER INSTALLATION. UNDER NO CIRCUMSTANCES WILL YOSHIMASA BE LIABLE FOR ANY LABOR CHARGED OR TRAVEL TIME INCURRED INSTALLATION OF ITS PRODUCTS. DAMAGE CAUSED BY IMPROPER INSTALLATION IS THE INSTALLER'S RESPONSIBILITY AND YOSHIMASA ASSUMES NO LIABILITY. THE FOLLOWING INSTRUCTIONS ONLY SET AN OUTLINE FOR PRODUCT INSTALLATION.

1. Take out the AIR FILTER from the condenser.

Easist way to remove the filter is that hold both sides of it (not the top and bottom) and pull outward all the way. It will be bent a bit, but no worry of a break.



2. Rinse out the dirt in the water

You may need to dip the filter in the water and shake it up several times or you can use a brush to remove the dirt thoroughly.



1. Replace the cleaned AIR FILTER.

Hold the both corner of the filter and put the top frame of it in the inside (not outside) rail track on the top board all the way. When the top portion of the filter is in its position push it hard until it is bent outward a bit and let go when the bottom portion of it close to the inside (not outside) rail track on the bottom body frame of the sushi case.

